

Technical Specifications

Material	Aluminium
Connections	½" flow and return
Test Pressure	9 Bar
Testing Authority	EN442
Maximum operating pressure	6 Bar
Maximum working temperature	100°C
Packaging	Wrapped in polythene and boxed
Cleaning	Soft damp cloth with nonabrasive cleaning product

PLEASE NOTE: To reduce the possibility of noise caused by rapid heating and cooling of aluminium radiators; adequate capacity for expansion must be provided within the overall heating system. Systems using micro bore pipework must have adequate pressure and flow rates for the number and style of radiators on the system.

Terms & Conditions

All products must be inspected once removed from the packaging and Hunt Heating notified within 28 days of delivery of any scratches, blemishes or other damage. Hunt Heating will then replace the radiator.

Imperfect radiators should therefore not be fitted and Hunt Heating will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If Hunt Heating are not notified within 28 days of the date on the signed delivery note then it will be deemed that Hunt Heating have fully complied with its obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims.

We recommend that after you check the product on delivery and that it is stored in its packaging to prevent damage prior to installation. Hunt Heating cannot accept responsibility for items damaged after delivery.

Guarantees & Liabilities

As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer, which is usually five years on most of our range. (Copies of specific guarantees for any of our products are available on request).

The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to Hunt Heating.



Aluminium

Mix, Oscar, Vip, Vox

Fittings Instructions



Aluminium radiators offer simple, contemporary styling matched with great outputs and economical efficiency.

Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty.

Hunt Heating
11 Fiveways Boulevard
Keysborough 3173
Victoria




ALUM1.2

If you have any questions please contact us on 1300 00 1800
www.huntheat.com.au


If you have any questions please contact us on 1300 00 1800
www.huntheat.com.au

Diagrams of Aluminium Radiators


A Joining Sections Together

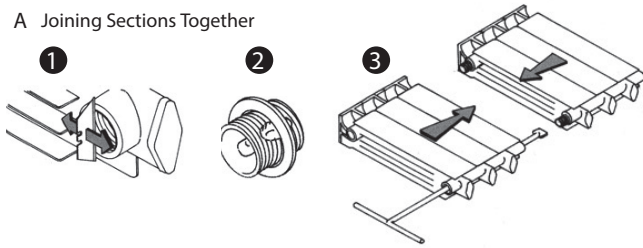


B Standard Configuration of Bushes

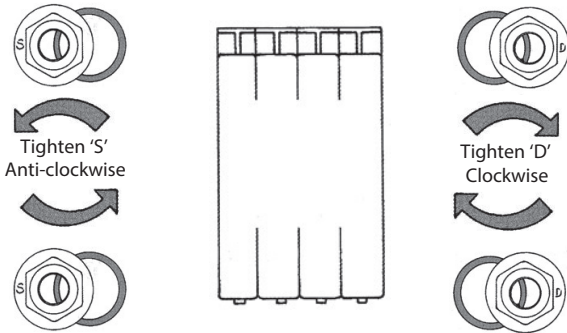

C Diverter Installation for Oscar

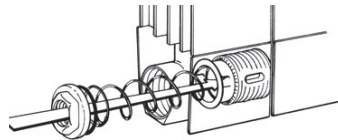

D Placement of Wall Brackets

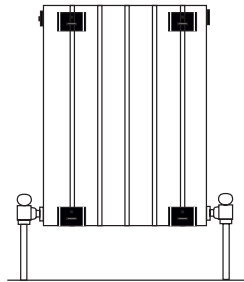

Pipe Centres

Pipe centres left to right
no. sections x 80mm + 28mm bushes + valves

Pipe centres from wall
70mm - 75mm


Depth from wall
116mm - 121mm

Brackets

E



F

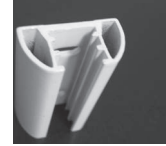

G



1 Unpack & Inspect

Hunt Heating prides itself on selecting products from manufacturers who exercise tight quality control measures. We only select models with excellent standards of welding and brazing, as well as high quality finishes. All of our products are well packaged and should reach you in perfect condition. Just in case however, we offer a 10 year no quibble guarantee for all aluminium radiators.



Please carefully unpack and inspect this radiator and all fittings. Hunt Heating must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on back page.

2 Contents

	up to 20 sections	21 - 30 sections	31 plus sections
• Wall Brackets	4	6	8

1 Fittings pack including:

- 4 Bushes with gaskets
- 1 Airvent
- 1 Blanking Plug, if your radiator requires a plug
- 1 Air vent key

For Oscar

- All above plus 1 Spring diverter

3 Joining Sections

Very long radiators may require on-site assembly.

1. Remove excess paint from the four radiator faces to be joined together by scraping a flat knife blade across the surface.
2. Place both halves to be assembled on a flat even surface and align the joining surfaces. The radiator sections and joining nipples have one left and one right hand thread - the Nipples must be inserted correctly to avoid cross threading. The end of the nipple with the right hand thread has a smooth edge; the end with the left hand thread has a serrated edge. Carefully insert the barrel nipples into both waterways on one half, taking care not to damage the threads, these can be screwed in a couple of turns each. Apply a little jointing compound to the soft fibre gasket and position this gasket within the central groove on the nipple (excluding the Oscar which is a dry fit)
3. Carefully insert the joining key through the collector until it locates the barrel nipple and gradually close the halves by equal amounts until tight (please see diagram).

4 Fit Bushes

IMPORTANT NOTE:

Aluminium radiators have specific left and right hand threaded bushes and these can be easily damaged if forced or incorrectly fitted (this will inevitably cause leaks). **Bushes require a dry fit connection only; you must not use any Compound materials (e.g. Jet Blue) or Plumbers Hemp.** If you choose you may use up to 4 turns of PTFE tape to help seal the threads (the tape should be applied in the direction of the thread and no more than this amount should be used as this may cause leaks to occur)

If looking directly at the front of the radiator, the two bushes with an 'S' cast on them are positioned on the left and turned anti-clockwise. The two bushes cast with a 'D' are positioned on the right and turned clockwise. Please see Diagram B.

5 Fit Diverter (Oscar only)

Oscar radiators over 1 metre tall are supplied with a spring diverter, which is installed in the lower waterway at either end.

This is installed by pushing the cap firmly in the waterway until it locates against the barrel nipple and is retained in place by the bush. The flow must enter this end first (please see diagram C).

6 Mark Brackets

You will have been supplied with a suitable amount of brackets for your radiator (see picture E and Contents).

The brackets are typically positioned one section in from either end with extra brackets spaced at equal distances between these two.

The two piece brackets can be adjusted both vertically, using the large dome head screw and front to back using the two positions in which the bracket hook can be placed (see picture F and G).

7 End Panels (if ordered with Vip or Oscar)

If you have end panels with your radiator, these will have a chrome cap that clips on top and a black clip that slides into the panel from the bottom which will click down onto the fins to secure.

8 Hang Radiator & Commission

With the brackets firmly fixed and level, the radiator is lowered directly onto the brackets. Connect valves and refill system, adding the correct inhibitor and check for leaks.

Please Note: In accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we strongly recommend flushing the heating system post installation of new radiators and then adding the correct quantity and type of inhibitor for use with your radiator and system to prevent corrosion. Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.